

Propane Fill Valves and Unloading Adapters

On most tanks and cylinders without a dedicated large bore vapor connection such as a Mc331, a 1-3/4" ACME connection that is commonly used as a filler valve would be a good choice for vapor flaring operations.




RESPONDERTRAINING.COM

respondertraining.rdh@gmail.com

Training by responders, for responders

Note: Unloading adapters such as the REGO 3119a and the REGO 3121 are not valves. They are designed to open the tank connection only. A separate control valve assembly should be installed inline in case the tank valve does not reseal.

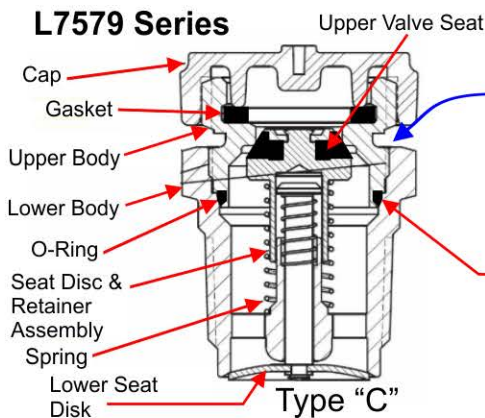

Upper O-Ring leak on underground tank



Box 2 - #39



Box 2 - #34



6579 Series valves include a swing-away check

Back Check



Upper Body

1 3/4" ACME Gasket

Type "C"

Seat Disk



Rego 3119a
Box 2 - #39



Rego 3121
Box 2 - #34



1 3/4"Female
ACME (In only)



1 3/4"Female
ACME (In and Out)
**Must be used with caution,
proper PPE must be used**
Box 1 - #1

LIQUID LOADING-UNLOADING ADAPTOR
(In and Out)

SPECIAL NOTE: when using the Rego 3121 adapter verify that the valve stem is completely retracted prior to connecting it to the Double-Check Filler Valve. Failure to do so may cause an unwanted product release.

3121 WARNING: Do not force the handwheel if it appears that the Filler Valve is wide open. In many makes of valves, the valve stem travel may be less than the plunger travel of the Unloading Adapter.